 


JOYBIS

QUICK START GUIDE

SIZE

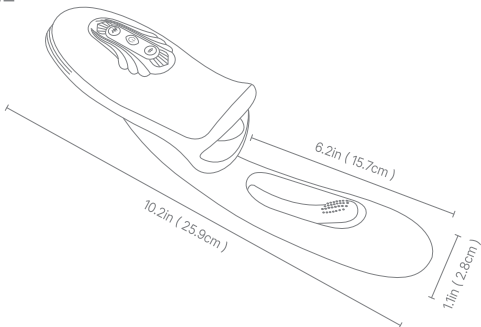 


SPECIFICATION



Power Source: USB Magnetic charging
Run time: 60 Minutes
Recharging: 150 Minutes
Special Features: 10 Vibrating & Flapping Modes
10 Biting Modes

Materials: Silicone+ABS+TPE
Weights: 0.76 lb
Size: 10 x 3.4 x 2.1 in
Waterproof: IPX6

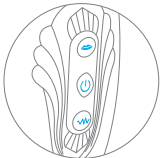FUNCTION



 
Short press "  " to adjust 10 flapping modes.
Long press "  " for 2s to turn off the flapping mode.

Short press "  " to adjust 10 kissing modes.
Long press "  " to turn off the kissing mode.

Long press "  " for 2s to turn on/off the toy.

USB CHARGING

***WARNING: Please DO NOT use adaptor with ">5V" output**

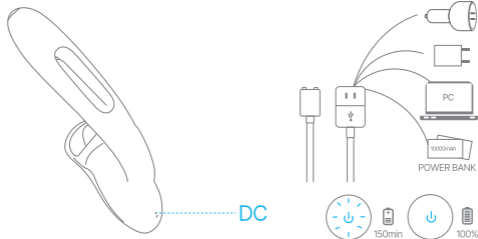

- Make sure to **fully** charge the toy before the first use.
- The product cannot be turned on when charging because of the battery protection mechanism.

PRODUCT CLEANING

- **Clean:** Please wash product with toy cleaner or antibacterial soap and water.
- **Dry:** Pat or wipe dry with clean cloth or towel.
- **Store:** Keep toy in a cool, dry place.
- **Attention:** Never clean the toy with abrasive cleaners containing alcohol, gasoline or acetone. Avoid direct sunlight.

SAFETY

- Do not use the product at temperatures over 167 °F (75 °C).
- Stop using it immediately if you experience any discomfort.
- Water-based lubricant is recommended.
- Do not use the product if you find it rough or damaged.
Keep out of reach of children.
- The product is waterproof, but it is not advisable to soak it in water for a long time.



MADE IN CHINA