




QUICK START GUIDE

SIZE

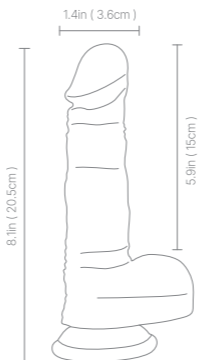

SPECIFICATIONS

Material:	Silicone+ABS	Charging Time:	210min
Weights:	0.93lb	Using Time:	60min
Functions:	8 Vibrating & Tapping Modes 8 Beads Sliding Modes Remote Control	Waterproof:	IPX6
		Power Source:	Rechargeable

FUNCTION

Note: The remote control needs the product to be powered on before it works.



Product

Long press "⏻" for 2s to turn on/off this device.
Short press "⏻" to change 8 modes of all function.




Remote control

Short press "⏻" to change 8 modes of all function.
Long press "⏻" for 2s to start/pause all modes.

USB CHARGING

***WARNING:** Please DO NOT use adaptor with ">5V" output

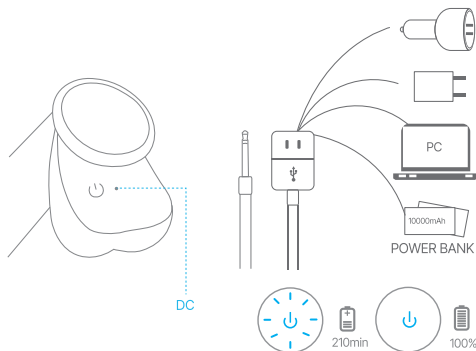

Make sure to fully charge the toy before the first use.

Connect the USB charging cable to a 5V output adapter. The LED indicator will start flashing. The product cannot be turned on while charging. When the charging is complete, the LED light will remain on.

PRODUCT CLEANING

- Clean: Please wash product with toy cleaner or antibacterial soap and water.
- Dry: Pat or wipe dry with clean cloth or towel.
- Store: Keep toy in a cool, dry place.
- Attention: Never clean the toy with abrasive cleaners containing alcohol, gasoline or acetone. Avoid direct sunlight.

SAFETY

- Do not use it at temperature over 167°F/75 °C.
- Stop using the toy if any discomfort occurs.
- Use with a water-based lubricant.
- Do not use if the product is damaged.
- Keep out of reach of children.



Certificates



MADE IN CHINA