
JOYBIS QUICK START GUIDE

SIZE

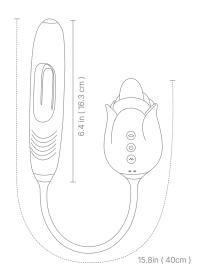

SPECIFICATIONS

Material: Silicone+ABS

Weights: 0.86lb

Functions: 10 Vibrating & Flapping Modes

10 Kissing Modes

Charging Time: 120min Using Time: 60min

Waterproof: IPX6

FUNCTION

All functions require the device to be powered on.



Kissing button:

Short press " to change between 10 kissing modes.
Long press " for 2s to turn off.

Flapping button:

Long press " b" for 2s to turn on/off the device.

Short press " () " to change between 10 flapping modes.

Vibrating button:


Short press " to change between 10 vibrating modes.

Long press " for 2s to turn off.

USB CHARGING

*WARNING: Please DO NOT use adaptor with ">5V" output.

*Make sure to fully charge the toy before the first use.

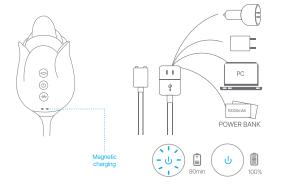

PRODUCT CLEANING

- Clean: Please clean product with warm water or antibacterial soap.
- . Wipe: Dry the product with paper towels.
- Save: Keep the product in a cool, dry and clean place.

 Attention: Never clean this product with organic cleaner that contains alcohol, gasoline or acetone. Avoid direct sunshine.

SAFETY

- Do not use it at temperature over 167 °F/75 °C.
- . Stop using it when any discomfort occurs.
- . It is recommended to use it with water-based lubricant.
- . Do not use it if you find the product unsmooth or damaged.
- . Keep out of reach of children.



