 
JOYBIS QUICK START GUIDE

SIZE



SPECIFICATION

Material: Silicone+ABS+TPE Power Source: USB charging Weights: 1.76 lb Run time: 70 Minutes

Special Features: 9 Thrusting & Rotating Modes Recharging: 120 Minutes

9 Sucking Modes 3 Voices of Moaning

FUNCTION



1. Long press " 🍥 " for 1.5 seconds to turn on or off the device. When the light is on, the device is in standby mode.

2. Short press " 8" to change 9 suction modes.

Long press " 🕏 " for 1.5 seconds to turn off the function.
3. Short press " 🚺 " to change 9 thrusting and rotation modes.

Long press " 11 " for 1.5 seconds to turn off the function.

4. The tens digit represents the vibration frequency, while the ones digit indicates the suction frequency.

USB CHARGING

*WARNING: Please DO NOT use adaptor with ">5V" output



- Please charge the product fully before first use.
- This product is charged via USB. Input voltage: 3.7V, input current: 1000mA.
- . Connect the USB cable to a USB power adapter (not included) or any available USB port. It can be charged with any compatible USB power adapter.
- For optimal charging and to avoid damaging the battery, please use a charger with matching parameters.
- To prolong battery life and ensure efficient charging, we recommend charging the product before the vibration weakens significantly.

PRODUCT CLEANING

For cleaning, please use a mild soap and water, Avoid using corrosive cleaning agents, as they may damage the product. Always clean after use to maintain the quality of the silicone material.

SAFETY

- This product is equipped with a built-in polymer battery, which should not be disassembled. Disassembling the battery may cause damage to the product.
- After use, store the product in a dry and well-ventilated area, away from children's reach.
- . If you experience any discomfort while using the product, discontinue use immediately. Regularly inspect the product and stop using it if any damage is detected.
- The product contains a built-in battery. Do not dispose of it carelessly when no longer in use.
- . Avoid contact between the battery and metal objects (e.g., coins), as this may cause short circuits, discharge, heat, or leakage.











