


JOYBIS

QUICK START GUIDE

SIZE

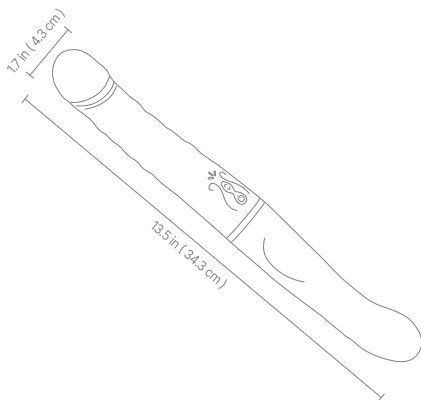

SPECIFICATIONS

Material: Silicone+ABS

Weights: 0.78lb

Power Source: USB charging

Functions: 10 Thrusting Modes

10 Vibrating Modes

Charging Time: 120min

Using Time: 60min

Waterproof: IPX6

FUNCTION



Product

Thrusting button:

Long press "▲" for 2 seconds to turn on (after the toy is powered on).

Short press "▲" to switch between 10 thrusting modes.

Vibrating button:

Long press "⏻" for 2 seconds to turn on/off.

Short press "⏻" to switch between 10 vibrating modes.

Remote control

Thrusting button:

Long press "⏻" for 2 seconds to activate/pause.

Short press "⏻" to switch between 10 thrusting modes.

Vibrating button:

Long press "⏻" for 2 seconds to activate/pause.


Short press "⏻" to switch between 10 vibrating modes.



USB CHARGING

*WARNING: Please do NOT use an adapter with an output greater than 5V.

*Make sure to fully charge the toy before the first use.

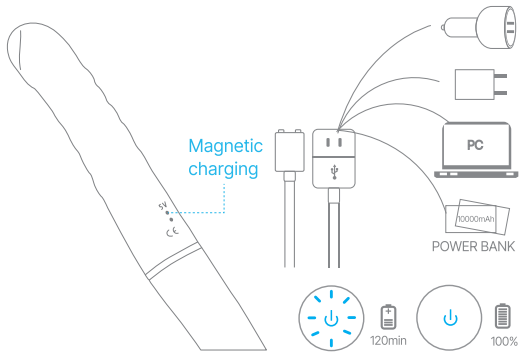

- Connect the device to USB port to charge.
- Do not use the device while charging.
- Please connect with power adapter below 5V.
- Do not submerge under water.
- If the product is not charging while plugged in, please wait 10 minutes and try again.

PRODUCT CLEANING

- Clean: Please clean product with warm water or antibacterial soap.
- Wipe: Dry the product with paper towels.
- Save: Keep the product in a cool, dry and clean place.
- Attention: Never clean this product with organic cleaner that contains alcohol, gasoline or acetone. Avoid direct sunshine.

SAFETY

- Do not use it at temperature over 167 °F/75 °C.
- Stop using it when any discomfort occurs.
- It is recommended to use it with water-based lubricant.
- Do not use it if you find the product unsmooth or damaged.
- Keep out of reach of children.



Certificates



MADE IN CHINA