


JOYBIS

QUICK START GUIDE

SIZE

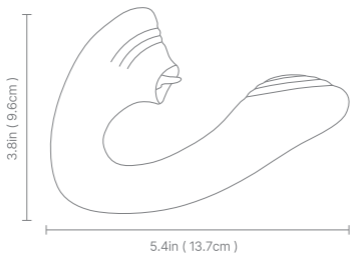

SPECIFICATION

Materials:	Silicone+ABS	Product Size:	3.8 x 5.4in
Power Source:	Rechargeable	Run time:	60 Minutes
Weights:	0.35 lb	Recharging:	70 Minutes
Special Features:	10 Vibrating modes 10 tongue-like licking modes	Waterproof:	IPX65

FUNCTION




1. Upon receiving the device, please charge it immediately (refer to the charging guide).
2. Long press "⏻" for 1.5 seconds to turn on or off the device. Short press "⏻" again to change the 10 vibration modes.
3. Short press "⏻" to switch among 10 tongue-licking modes.

USB CHARGING

***WARNING: Please DO NOT use adaptor with ">5V" output**

***Please make sure your toy is fully charged while the first time**

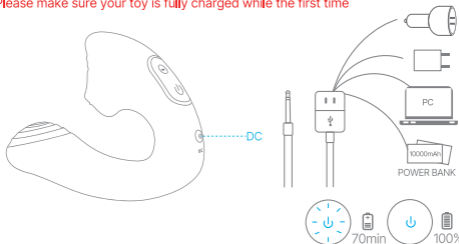

PRODUCT CLEANING

- Clean: Please wash product with toy cleaner or antibacterial soap and water.
- Dry: Pat or wipe dry with clean cloth or towel.
- Store: Keep toy in a cool, dry place.
- Attention: Never clean the toy with abrasive cleaners containing alcohol, gasoline or acetone. Avoid direct sunlight.

SAFETY

- Do not use it at temperature over 167°F/75 °C.
- Stop using the toy if any discomfort occurs.
- Use with a water-based lubricant.
- Do not use if the product is damaged.
- Keep out of reach of children.



Certificates



MADE IN CHINA