 
JOYBIS QUICK START GUIDE

SIZE



SPECIFICATIONS

Material: Silicone+ABS+ TPE Weights: 0.55lb

Functions: 7 Tapping Modes

unctions: 7 Tapping Modes 7 Sucking Modes

7 Vibrating Modes

Charging Time: Using Time: Waterproof:

90min 60min IPX6

FUNCTION



Flapping button:

Vibrating button:

Long press " 🖒 " for 2s to turn on/off the toy.

Short press " ტ " to change 7 vibrating modes.


Sucking button:

Short press " \ " to change 7 sucking modes.

Long press " \ " for 2s to turn off the function.

USB CHARGING

*WARNING: Please DO NOT use an adaptor with ">5V" output *Please make sure your toy is fully charged the first time

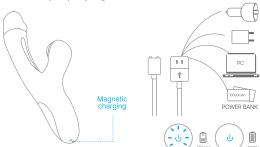

PRODUCT CLEANING

- Disinfection: Before using, clean the product with warm water and antibacterial soap, and wipe it with a towel or soft cloth.
- Lubricants: Do not use massage oil, hand cream, detergent, petrol, or acetone as lubricants.
- Cleaning: Clean the product as soon as possible after use to prevent the buildup of secretions and lubricant residue, which can breed bacteria if left uncleaned for an extended period.
- . Washing: Clean with warm water and soap. It's recommended to use a detergent specifically designed for sex toys, disinfectant, or 70% alcohol, However, long-term use of alcohol is not advised, as it may corrode the product's appearance and shorten its lifespan.
- . Drying: After washing, wipe with a cotton cloth or high-quality tissue, then allow it to air dry naturally, away from direct sunlight.
- Storage: Store the product in a dust-free environment, away from other materials.

SAFETY

- This product is for personal use only; do not share it with others for your health and safety.
- To meet the varying needs of different users, the product is designed with different vibration. frequencies. Please stop using it if you experience any discomfort or allergic reactions.
- Exercise caution when using the product for anal stimulation to avoid injury, especially if the product falls during use. We recommend using it with lubricant for better effect. Stop using it if the surface becomes rough or has sharp edges.
- Keep the product out of reach of children and pets. If any components are ingested by children or pets.













