


# JOYBIS

## QUICK START GUIDE

### SIZE

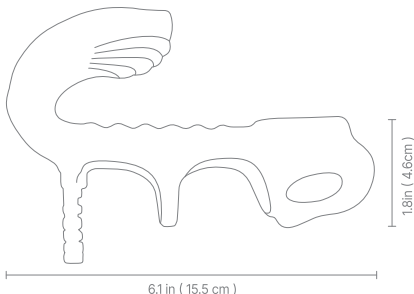

### SPECIFICATION

Materials: Silicone+ABS  
Power Source: Rechargeable  
Weights: 0.48 lb  
Special Features: 7 Vibrating Modes

Run time: 40 Minutes  
Recharging: 120 Minutes  
Waterproof: IPX5

 
### FUNCTION



#### Product main power button:

Long press "⏻" to start/stop the host function.

Short press "⏻" to switch between 7 frequencies, which can be cycled.



#### Remote control:

Short press " - " to proceed to the next frequencies, which can be cycled.


Short press " + " to go to the previous frequency, which can be cycled.

Long press "⏻" to turn on/off the standby function of the remote control.

## USB CHARGING

**\*WARNING: Please DO NOT use adaptor with ">5V" output**

**\*Please make sure your toy is fully charged the first time**

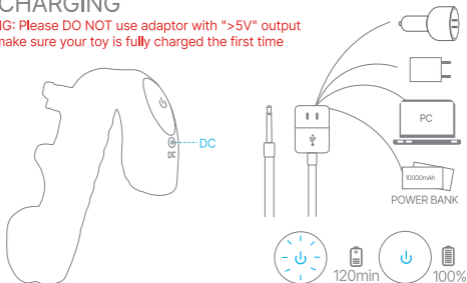

Locate the charging jack on the bottom of the product and plug it into the charging port with the supplied USB charging cable. It can be charged by USB charger or computer USB interface. When charging, it will flash blue light. When it is fully charged, the static blue light will be bright. Can be used with any mobile phone charging head. Please charge the product before use.

1. This product uses a built-in rechargeable lithium battery. After two or three times of charging and discharging, the battery can fully exert its performance. When the product is charged, it should not be exposed to high temperature and humidity.
2. Disconnect the charger after the product is fully charged to prevent overcharging and shorten battery life.
3. Disposal: After the product is scrapped, it should be disposed of according to the waste electronic products and recycled to the corresponding old electronic recycling station. This product is not suitable for ordinary garbage disposal.

## PRODUCT CLEANING

- It can be powered by the charger interface, but the current output of the charger is related to the speed of charging. It is recommended that you use a 5V/1000mA charger to avoid damage caused by improper charging.
- Please clean thoroughly before and after use.
- Wash with water after use, mix with shower gel or neutral detergent, and put it in a ventilated place to dry. Do not use detergents containing gasoline or acetone to corrode silicone products.
- Store the product in a cool, ventilated, dry place. Ensure that the product is protected from direct sunlight, high temperatures, heavy pressure, moisture and pollution.

## SAFETY

- Do not use it at temperature over 167°F/75 °C.
- Stop using the toy if any discomfort occurs.
- Use with a water-based lubricant.
- Do not use if the product is damaged.
- Keep out of reach of children.



MADE IN CHINA