# JOYBIS QUICK START GUIDE

## SIZE



## **SPECIFICATIONS**

Material: Weights: Silicone+ABS

Functions: 3

0.66lb 3 Clit & G-spot Vibrating Modes 3 Beads Ring Sliding Modes Charging Time: Using Time: Waterproof: 120min 45min IPX5

# **FUNCTION**



### Shaft vibration button:

Long press " ₹ " for 2s to turn on/off.

Short press " \ \ " to change the 3 vibrating modes.

#### Sliding beads button:

Long press " 11 " for 2s to turn on/off.

Short press " 1 " to change 3 beads ring sliding modes.


#### Clit vibration button:

Long press " W" for 2s to turn on/off.

Short press " W " to change the 3 vibrating modes.

## USB CHARGING

\*WARNING: Please DO NOT use an adaptor with ">5V" output \*Please make sure your toy is fully charged the first time

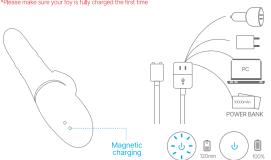

# PRODUCT CLEANING

- Clean: Wash the product with warm water and antibacterial soap.
- . Wipe: Dry the product with paper towels.
- Save: Keep the product in a cool, dry, and clean place.
- Attention: Never clean the product with organic cleaners that contain alcohol, gasoline, or acetone. Avoid exposure to direct sunlight.

# SAFETY

- Do not use the product at temperatures over 167 °F (75 °C).
- . Stop using it immediately if you experience any discomfort.
- · Water-based Jubricant is recommended.
- . Do not use the product if you find it rough or damaged.
- . Keep out of reach of children.



