 


JYBIS

QUICK START GUIDE

SIZE

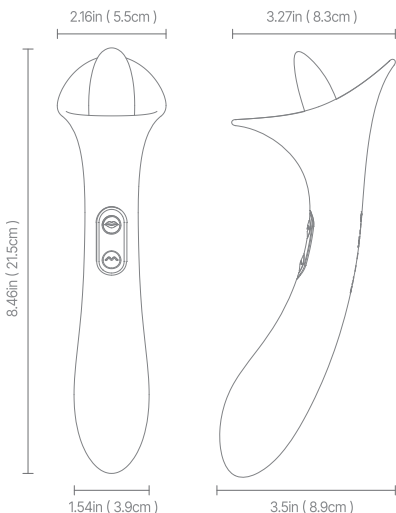

SPECIFICATIONS

Material: Silicone+ABS
Weights: 0.33 lb
Product Size: 8*2.7*2 in
Functions: 9 Vibrating Modes
9 Tongue Licking Modes

Charging Time: 120min
Using Time: 60min
Waterproof: IPX7

 
FUNCTION



Hold on 3s



- ON/OFF Hold "⏻" 3 seconds to turn on/off the product.
- Press "⏻" button to Switch head 9-frequency tongue licking mode

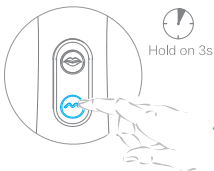

Hold on 3s



- ON/OFF Hold "🌀" 3 seconds to turn on/off the product.
- Press "🌀" button to Switch 9-frequency vibration mode

 


9 PATTERNS

USB CHARGING

*WARNING: Please DO NOT use adaptor with ">5V" output.

*Please make sure your toy is fully charged the first time.

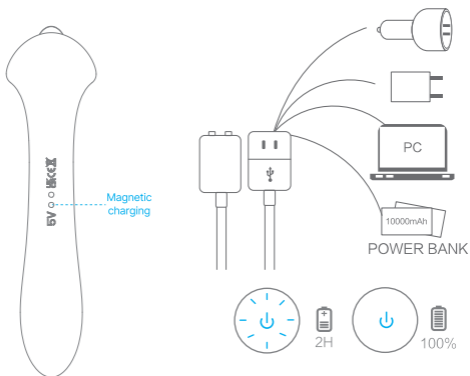

- Connect the device to USB port to charge.
- Do not use the device while charging.
- Please connect with power adapter below 5V.
- Do not submerge under water.
- If the product does not charge when plugged in, please wait for 10 minutes to confirm.

PRODUCT CLEANING

- Clean: Please clean product with warm water or antibacterial soap.
- Wipe: Dry the product with paper towels.
- Save: Keep the product in a cool, dry and clean place.
- Attention: Never clean this product with organic cleaner that contains alcohol, gasoline or acetone. Avoid direct sunshine.

SAFETY

- Do not use it at temperature over 167 °F/75 °C.
- Stop using it when any discomfort occurs.
- It is recommended to use it with water-based lubricant.
- Do not use it if you find the product unsmooth or damaged.
- Keep out of reach of children.



Certificates



MADE IN CHINA