


JOYBIS

QUICK START GUIDE

SIZE

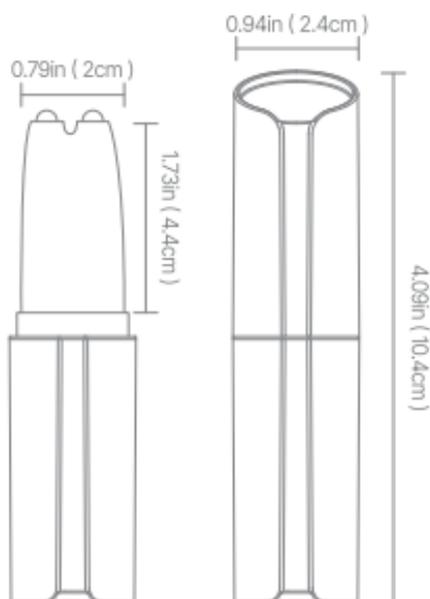


SPECIFICATION


Material:	Silicone+ABS	Power Source:	USB charging
Weights:	0.11 lb	Run time:	40~70 Minutes
Product Size:	4.1 x 0.1 x 0.1 in	Recharging:	60 Minutes
Special Features:	9 Vibrating Modes 3 Microcurrent frequencies	Waterproof:	IPX7

FUNCTION

ON / OFF

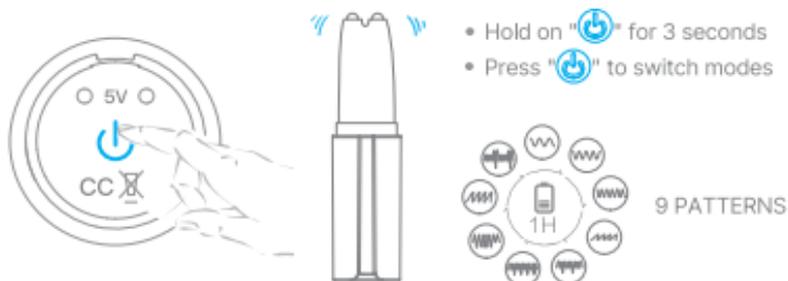


MICROCURRENT MODE

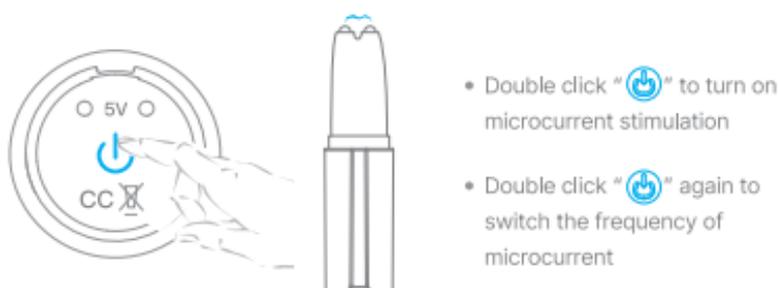

USB MAGNETIC CHARGING

***WARNING: Please DO NOT use adaptor with ">5V" output**

***Please make sure your toy is fully charged the first time**

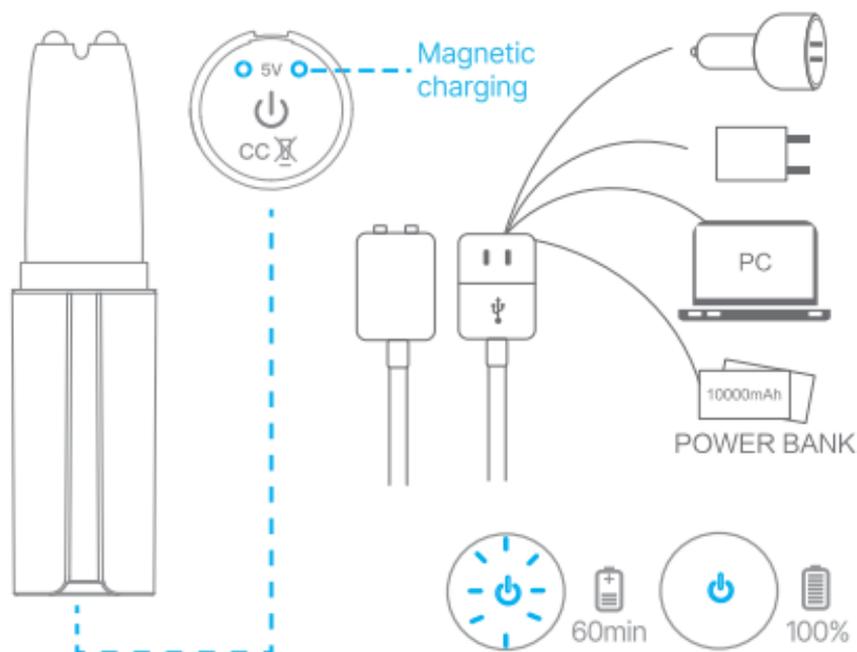

- Connect the device to USB port to charge .
- Do not use the device while charging.
- Please connect with power adapter below 5V.
- Do not keep the device in water for a long time.
- If the product fails to charge when powered on, please wait for 10 minutes and then check.

PRODUCT CLEANING

- Clean: Please wash product with toy cleaner or antibacterial soap and water.
- Dry: Pat or wipe dry with clean cloth or towel.
- Store: Keep toy in a cool, dry place.
- Attention: Never clean the toy with abrasive cleaners containing alcohol, gasoline or acetone. Avoid direct sunlight.

SAFETY

- Do not use it at temperature over 167°F/75 °C.
- Stop using the toy if any discomfort occurs.
- Use with a water-based lubricant.
- Do not use if the product is damaged.
- Keep out of reach of children.



Certificates

UK
CA



MADE IN CHINA