


JOYBIS

QUICK START GUIDE

SIZE

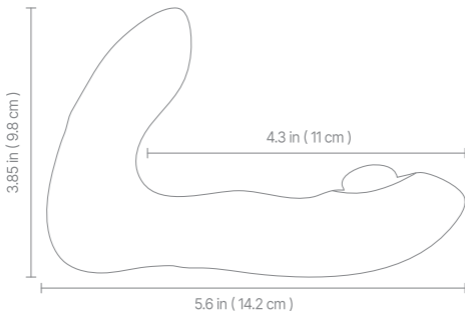



SPECIFICATION

Material:	Silicone+ABS	Power Source:	USB charging
Weights:	0.51 lb	Run time:	60 Minutes
Special Features:	10 Vibrating Modes	Recharging:	90 Minutes
	10 Tapping Modes	Waterproof:	IPX5
	Remote Control		

FUNCTION





Product

Long press "  " for 2s to turn on/off the toy.
Short press "  " to switch 10 vibrating modes.

Short press "  " to switch 10 tapping modes.




Remote control

Short press "  " for switch 10 tapping modes.
Short press "  " to switch 10 vibrating modes.

USB CHARGING

- *WARNING: Please DO NOT use adaptor with ">5V" output
- *Please make sure your toy is fully charged while the first times

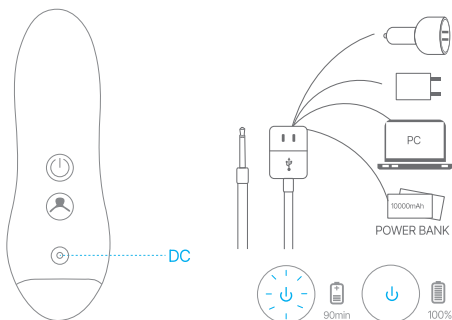

PRODUCT CLEANING

- Clean: Wash the product with warm water and antibacterial soap.
- Wipe: Dry the product with paper towels.
- Store: Keep the product in a cool, dry, and clean place.
- Attention: Do not clean with organic cleaners containing alcohol, gasoline, or acetone. Avoid direct sunlight.

SAFETY

- Do not use it at temperatures exceeding 167°F (75°C).
- Stop using if any discomfort occurs.
- Water-based lubricant is recommended.
- Do not use if the product is damaged or feels unsmooth.
- Keep out of reach of children.



MADE IN CHINA