


JOYBIS

QUICK START GUIDE

SIZE

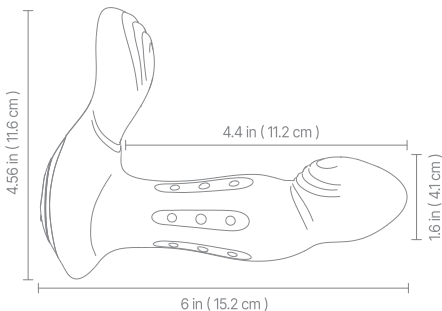




SPECIFICATION

Material:	Silicone+ABS	Power Source:	USB charging
Weights:	0.51 lb	Run time:	45 Minutes
Special Features:	10 Vibrating Modes	Recharging:	120 Minutes
	10 Wiggling & Swinging Modes	Waterproof:	IPX6
	Remote Control		

FUNCTION







Product

Long press "  " for 1.5 seconds to turn the product on/off.
Short press "  " to switch between 10 vibration modes.
Double-click "  " to switch between 10 wiggling and swinging modes.




Remote control

Short press "  " to switch between 10 wiggling and swinging modes.
Long press "  " to pause.
Short press "  " to switch between 10 vibration modes.
Long press "  " to pause.

USB CHARGING

- *WARNING: Please DO NOT use adaptor with ">5V" output
- *Please make sure your toy is fully charged while the first times

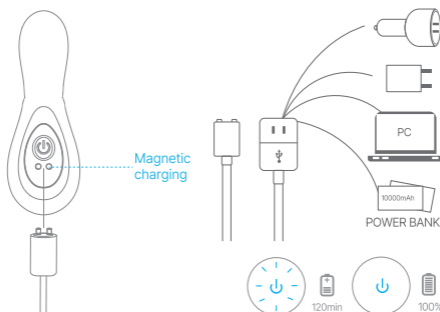

- This product is charged via a USB power supply. It takes 2 hours to fully charge and can be used for approximately 45 minutes.
- Please use a charger with matching parameters for charging. Charging with a charger that has mismatched parameters may affect battery life or cause damage to the product.

PRODUCT CLEANING

- Keep the product clean after use.
- Do not use corrosive cleaners for cleaning.

SAFETY

- This product is not for use by minors under the age of 18.
- This product has a built-in polymer lithium battery, which cannot be disassembled. Please do not attempt to disassemble it yourself.
- After use, store the product in a dry, well-ventilated place, away from children.
- The product contains a built-in battery. Please do not discard it when no longer in use. Be sure to dispose of it in an environmentally responsible manner.



Certificates

MADE IN CHINA