


JOYBIS

QUICK START GUIDE

SIZE

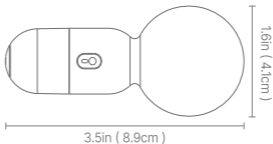


SPECIFICATION

Power Source:	USB Magnetic charging	Materials:	Silicone+ABS
Run time:	60 Minutes	Weights:	0.13 lb
Recharging:	50 Minutes	Size:	3.5x1.6x1.6in
Special Features:	9 Vibrating Modes	Waterproof:	IPX6

FUNCTION




Long press "  " for 3 seconds to turn on/off the product.
Short press "  " to change the 9 vibrating modes.

USB CHARGING

***WARNING: Please DO NOT use adaptor with ">5V" output**



- **WARNING:** Do NOT use adapters with an output greater than 5V.
- Ensure the device is fully charged before first use.
- Connect the device to a USB port to charge.
- Do not use the device while charging.
- Use a power adaptor with an output of 5V or lower.
- Do not submerge the device in water for extended periods.

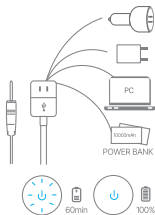

PRODUCT CLEANING

- **Clean:** Please clean product with warm water or antibacterial soap.
- **Wipe:** Dry the product with paper towels.
- **Save:** Keep the product in a cool, dry and clean place.
- **Attention:** Never clean this product with organic cleaner that contains alcohol, gasoline or acetone. Avoid direct sunshine.

SAFETY

- Do not use it at temperature over 167 °F/75 °C.
- Stop using it when any discomfort occurs.
- It is recommended to use it with water-based lubricant.
- Do not use it if you find the product unsmooth or damaged.
- Keep out of reach of children.



Certificates



MADE IN CHINA