


JYBIS

QUICK START GUIDE

SIZE

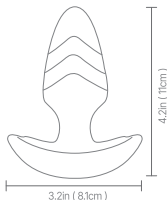

PRODUCT PARAMETERS:

Charging time: 120 minutes

Using time: 50 minutes

Special Features: 10 Vibrating Modes

10 Rotating Modes

Remote Control

Weights: 0.26lb

Waterproof: IPX6

Material: ABS+Silicone

FUNCTION



Product

Long press "  " for 2s to turn on/off.

Short press "  " to change 10 modes.




Remote Control

Short press "  " to to change 10 modes.

Long press "  " for 2s pause/start the toy.

USB CHARGING

- *WARNING: Please DO NOT use adaptor with ">5V" output
- *Please make sure your toy is fully charged while the first times

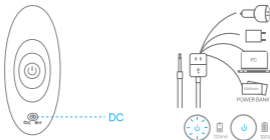

- Please insert the cable into the charge hole.

PRODUCT CLEANING

- Clean: Wash the product with warm water and antibacterial soap.
- Wipe: Dry the product with paper towels.
- Store: Keep the product in a cool, dry, and clean place.
- Attention: Do not clean with organic cleaners containing alcohol, gasoline, or acetone. Avoid direct sunlight.

SAFETY

- Do not use it at temperatures exceeding 167°F (75°C).
- Stop using if any discomfort occurs.
- Water-based lubricant is recommended.
- Do not use if the product is damaged or feels unsmooth.
- Keep out of reach of children.



MADE IN CHINA