


JOYBIS

QUICK START GUIDE

SIZE

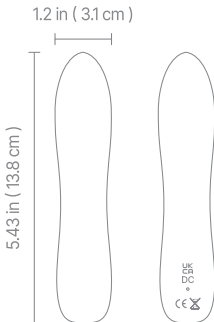



Specification

Materials:	Silicone
Weights:	0.24 lb
Special Features:	10 vibrating modes
Size:	5.43 x 1.41 in
Power Source:	USB charging
Run time:	≥60 Minutes
Recharging:	2.5-3 Hours
Waterproof:	Life waterproof


FUNCTION



Long press  for 1.5 seconds to turn on/off the device.
Short press  to change the 10 vibration settings.

USB CHARGING

***WARNING:** Please DO NOT use adaptor with ">5V" output

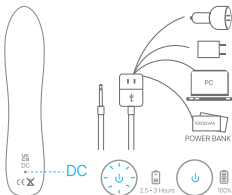

- Connect the device to USB port to charge .
- Do not use the device while charging.
- Please connect with power adapter below 5V.
- Do not submerge under water.
- If the product is not charging while plugged in, please wait 10 minutes and try again.

PRODUCT CLEANING

- Clean: Please wash product with toy cleaner or antibacterial soap and water.
- Dry: Pat or wipe dry with clean cloth or towel.
- Store: Keep toy in a cool, dry place.
- Attention: Never clean the toy with abrasive cleaners containing alcohol, gasoline or acetone. Avoid direct sunlight.

SAFETY

- Do not use it at temperature over 167°F/75 °C.
- Stop using the toy if any discomfort occurs.
- Use with a water-based lubricant.
- Do not use if the product is damaged.
- Keep out of reach of children.



MADE IN CHINA