

JOYBIS

QUICK START GUIDE

SIZE



SPECIFICATION

Material: Silicone+ABS
Weights: 0.9 lb
Special Features: 10 Vibrating Modes
5 Rotating Modes

Power Source: USB charging
Run time: 60 Minutes
Recharging: 150 Minutes

FUNCTION



Vibrator button

After powering on, short press "⏻" once to activate the vibration function. There are 10 vibration modes in total.

Spin button

After powering on, short press "🔄" to activate the rotation function. There are 5 rotation modes in total.

On/Off

Long press "⏻" for 2 seconds to turn the device on or off.

Note: When there is a foreign object in the junction area, please take it out to avoid affecting the rotating function of the product.

USB CHARGING


***WARNING: Please DO NOT use adaptor with ">5V" output**

***Please make sure your toy is fully charged while the first time**

Please insert the cable into the charge hole.



DC

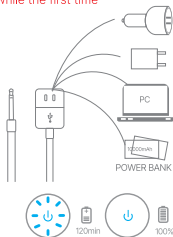

PRODUCT CLEANING

When disassembling the product for cleaning, please hold both the sleeve and the handle, then pull out the sleeve, which is the upper part of the product. (To avoid damaging the product, do not just pull on the sleeve alone.)

SAFETY

1. Before each use, please disinfect the product, scrub with warm water and antibacterial soap, and gently dry with a towel or soft cloth.
2. Please do NOT use massage oil, hand cream, cleanser, gasoline, or acetone as a lubricant. Please stop using this product immediately if sharp corners are found on the sleeve of the product before use.
3. Please use the lubricating product with it.
4. This product is for personal use. For your health, please do not use it with others.
5. If feel uncomfortable during use, please stop using it immediately.
6. As there is a lot of secretions and lubricating residue after use, which is very easy to breed bacteria, so please start cleaning as soon as possible.
7. Please place the massager and its parts out of reach of children and pets.



Certificates



MADE IN CHINA