 
JOYBIS QUICK START GUIDE

SI7F



SPECIFICATION

Materials: Power Source:

Silicone+ABS Rechargeable 0.21 lb

Weights: Special Features: 7 Vibrating Modes

Remote Control

Product Size: 5.9x5.1x2.0in 60 Minutes Run time: Recharging: 90 Minutes

Waterproof: IPX6

FUNCTION





Long press " " for 1.5 seconds to turn on the product.

The indicator light will turn on, and the product will enter the first vibration

Short press " 🖰 " to change the vibration mode.

There are a total of 7 vibration modes that cycle in order.

Long press " " for 1.5 seconds to turn on/off the product. The indicator light will turn off and the vibration will stop.



Remote Control

1. Long press " O " to turn on/off the product.

2. Short press " " to enter the first vibration mode.

 
Press " ~ " again to change the vibration mode.

There are a total of 7 vibration modes that cycle in order.

USB CHARGING

*WARNING: Please DO NOT use adaptor with ">5V" output





- 1. Please fully charge the product when you use it for the first time, the indicator light blinks under the charging state and is always on when it is full. Battery capacity is 240mAh, about 1.5 hours full
- 2. Please clean and dry the appliance thoroughly before each charge. The normal running time is 1 hour.
- 3. Please use a charger with matching parameters to charge, charging with a charger with unmatched parameters may affect the battery life or cause the product to be destroyed.

Note: The product cannot be used while charging.

PRODUCT CLEANING

Wash the product thoroughly before and after each use. Make sure that the product is switched off and closed before cleaning. Rinse the main part with water and germicidal soap, then rinse with clean water and wipe dry with a towel. Do not use cleaning agents containing alcohol, petroleum-based solvents or acetone.

Store the product in a cool, ventilated and dry place, keeping it away from heat, pressure and humidity. If the product turns off automatically, it may be due to a low battery level, which will activate the self-protection mode, please recharge it in time.

SAFFTY

As a close companion of the majority of users, the safe and healthy use of this massager is the common responsibility of users and us.

Now remind the majority of users: this product is only suitable for adults aged 18 years or older, please keep away from children placed. Do not use excessive force during the use of the product, please pay attention to avoid injury. Do not mix this product with others. If you feel uncomfortable during use, please stop using the product immediately. Check the product regularly for damage, and stop using it immediately if damage is found. After the product is disposed of, it should be treated as waste electrical and electronic products and recycled to the corresponding waste electrical and electronic products recycling station.











