 


JOYBIS

QUICK START GUIDE

SIZE

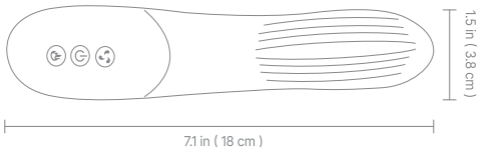

PRODUCT PARAMETERS:

Material: Silicone+ABS

Run time: 60 minutes

Product Weight: 0.35lb

Recharging: 120 minutes

Main Function: 7 Vibrating & Flickering Modes
Heating Features

FUNCTION



Vibration & swinging button: short press "🔄" to change 7 vibration & swinging modes.


Turn on/off: Long press "🔌" for 2 seconds to turn on the device. A red LED will light up, indicating that the device is on. Long press "🔌" for 2 seconds to turn off the device until the red LED light turns off.

Heat button: short press "🔥" to activate heating function.


USB CHARGING

***WARNING: Please DO NOT use adaptor with ">5V" output**

 ***Please make sure your toy is fully charged the first time**

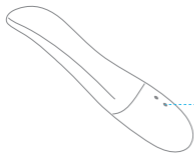

Magnetic
charging

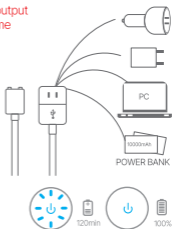 

PRODUCT CLEANING

- Clean: Please wash product with toy cleaner or antibacterial soap and water.
- Dry: Pat or wipe dry with clean cloth or towel.
- Store: Keep toy in a cool, dry place.
- Attention: Never clean the toy with abrasive cleaners containing alcohol, gasoline or acetone. Avoid direct sunlight.

SAFETY

- Do not use it at temperature over 167°F/75 °C.
- Stop using the toy if any discomfort occurs.
- Use with a water-based lubricant.
- Do not use if the product is damaged.
- Keep out of reach of children.



MADE IN CHINA