


JOYBIS

QUICK START GUIDE

SIZE

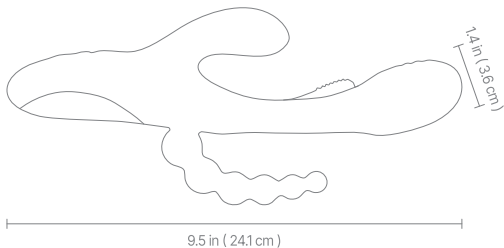


SPECIFICATIONS

Material: Silicone+ABS+ TPE
Weights: 0.66lb
Functions: 7 G-spot Vibration Modes
7 Tapping Modes
7 Clit Vibration Modes

Charging Time: 120min
Using Time: 60min
Waterproof: IPX6

FUNCTION

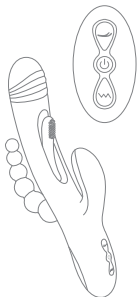

Long press "  " to turn on/off the device.

Short press "  " to adjust the 7 G-spot vibrating modes.

Short press "  " to adjust the 7 tapping modes.

Long press "  " to turn off it.


Short press "  " to adjust the 7 Clit vibrating modes.

Long press "  " to turn off it.

USB CHARGING

*WARNING: Please DO NOT use an adaptor with ">5V" output

*Please make sure your toy is fully charged the first time

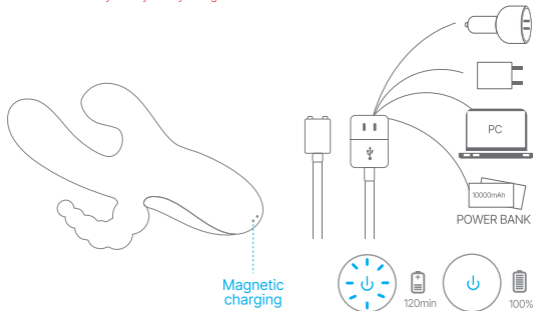

PRODUCT CLEANING

- Clean: Wash the product with warm water and antibacterial soap.
- Wipe: Dry the product with paper towels.
- Save: Keep the product in a cool, dry, and clean place.
- Attention: Never clean the product with organic cleaners that contain alcohol, gasoline, or acetone. Avoid exposure to direct sunlight.

SAFETY

- Do not use the product at temperatures over 167 °F (75 °C).
- Stop using it immediately if you experience any discomfort.
- Water-based lubricant is recommended.
- Do not use the product if you find it rough or damaged.
- Keep out of reach of children.



Certificates



MADE IN CHINA