 
JOYBIS QUICK START GUIDE

SIZE



PRODUCT PARAMETERS:

Materials: Power Source:

Silicone+ABS Rechargeable 0.19 lb Special Features: 10 Vibrating Modes Remote Control

Product Size: 9.7x3.6x2.3in Run time: 70 Minutes Recharging: 80 Minutes Waterproof: IPX6

FUNCTION



Product Long press " (1) " for 1.5 seconds to turn on the product.

The indicator light will turn on, and the product will enter the first vibration mode. Short press " (1) " to change 10 vibration modes. Long press " U " for 1.5 seconds to turn off

the product. The indicator light will turn off and the vibration will stop.

 
Remote control

1. Long press " (b) " for 1.5 seconds to turn on/off the product. 2. Short press " * to change 10 vibration

modes

USB CHARGING

*WARNING: Please do NOT use an adapter with an output greater than 5V. *Make sure to fully charge the toy before the first use.



PRODUCT CLEANING

- Clean: Wash the product with warm water and antibacterial soap. · Wipe: Dry the product with paper towels.
- Store: Keep the product in a cool, dry, and clean place.
- Attention: Do not clean with organic cleaners containing alcohol. gasoline, or acetone. Avoid direct sunlight.

SAFETY

- Do not use it at temperatures exceeding 167°F (75°C).
- Water-based lubricant is recommended.
- Do not use if the product is damaged or feels unsmooth.
- Keep out of reach of children.







