


JOYBIS

QUICK START GUIDE

SIZE

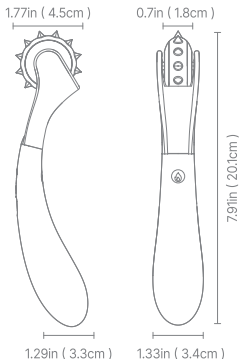

SPECIFICATION

Power Source: USB Magnetic charging
Run time: 40~55 Minutes
Recharging: 120 Minutes
Special Features: 9 Vibrating Modes
360° Roller Rotating

Materials: Silicone+ABS
Weights: 0.25 lb
Size: 7.9x2.8x1.4in
Waterproof: IPX7

FUNCTION




- ON/OFF: Press "  " for 3 seconds



- After turned on, Press "  " to switch 9 vibration modes

USB MAGNETIC CHARGING

***WARNING: Please DO NOT use adaptor with ">5V" output**

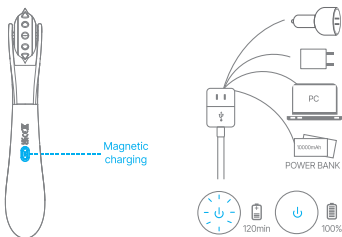

- Connect the device to USB port to charge .
- Do not use the device while charging.
- Please connect with power adapter below 5V.
- Do not keep the device in water for a long time.
- If the product fails to charge when powered on, please wait for 10 minutes and then check.

PRODUCT CLEANING

- Clean: Please clean product with warm water or antibacterial soap.
- Wipe: Dry the product with paper towels.
- Save: Keep the product in a cool, dry and clean place.
- Attention: Never clean this product with organic cleaner that contains alcohol, gasoline or acetone. Avoid direct sunshine.

SAFETY

- Do not use it at temperature over 167 °F/75 °C.
- Stop using it when any discomfort occurs.
- It is recommended to use it with water-based lubricant.
- Do not use it if you find the product unsmooth or damaged.
- Keep out of reach of children.



Certificates



MADE IN CHINA