 


JOYBIS

QUICK START GUIDE

SIZE

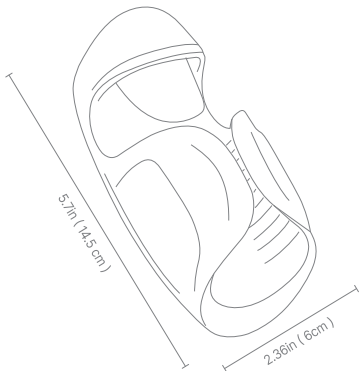 


SPECIFICATION

Materials: Silicone+ABS
Power Source: Rechargeable
Weights: 0.72 lb
Special Features: 10 Vibrating & Pulsing Modes
10 Tongue Licking Modes


Run time: 60 Minutes
Recharging: 150 Minutes
Waterproof: IPX6

FUNCTION

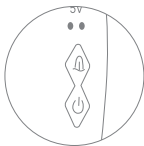


On/off button:

Long press "  " for 2s to turn on/off the device.

Short press "  " to change between 10 tapping and vibration modes.

Licking button:

 
Short press "  " to change 10 tongue-like licking modes.

Long press "  " for 2s to turn off (the device needs to be on).

USB CHARGING

***WARNING:** Please do NOT use an adapter with an output greater than 5V.

***Please** make sure your toy is fully charged the first time

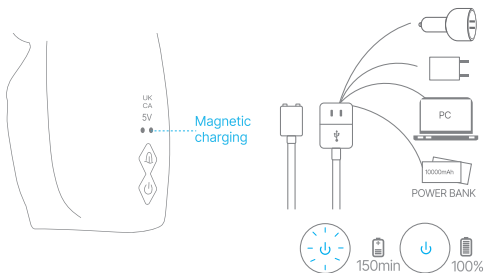

PRODUCT CLEANING

- Clean: Please wash product with toy cleaner or antibacterial soap and water.
- Dry: Pat or wipe dry with clean cloth or towel.
- Store: Keep toy in a cool, dry place.
- Attention: Never clean the toy with abrasive cleaners containing alcohol, gasoline or acetone. Avoid direct sunlight.

SAFETY

- Do not use it at temperature over 167°F/75 °C.
- Stop using the toy if any discomfort occurs.
- Use with a water-based lubricant.
- Do not use if the product is damaged.
- Keep out of reach of children.



Certificates



MADE IN CHINA