


JYBIS

QUICK START GUIDE

SIZE

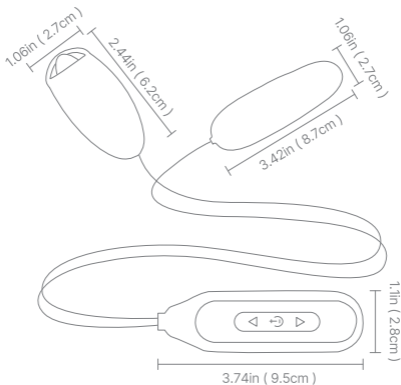

SPECIFICATIONS

Material: Silicone+ABS
Weights: 0.35lb
Functions: 9 Vibrating Pulsing Modes
9 Vibrating Licking Modes
3 Remote Control Modes

Charging Time: 90min
Using Time: 25min
Waterproof: IPX7

FUNCTION



Hold on 3s



- ON/OFF
Hold on "🔌" for 3 seconds



- Press the "▲" button again after starting the machine Switch 9 shock modes of egg skipping




- Press the "▼" button to switch 9 kinds of tongue licking modes.

USB CHARGING

*WARNING: Please DO NOT use adaptor with ">5V" output.

*Make sure to fully charge the toy before the first use.

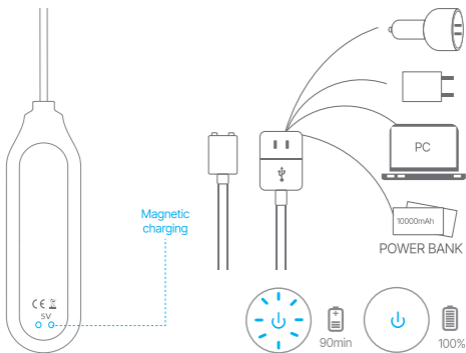

- Connect the device to USB port to charge .
- Do not use the device while charging.
- Please connect with power adapter below 5V.
- Do not keep the device in water for a long time.
- If the product fails to charge when powered on, please wait for 10 minutes and then check.

PRODUCT CLEANING

- Clean: Please clean product with warm water or antibacterial soap.
- Wipe: Dry the product with paper towels.
- Save: Keep the product in a cool, dry and clean place.
- Attention: Never clean this product with organic cleaner that contains alcohol, gasoline or acetone. Avoid direct sunshine.

SAFETY

- Do not use it at temperature over 167 °F/75 °C.
- Stop using it when any discomfort occurs.
- It is recommended to use it with water-based lubricant.
- Do not use it if you find the product unsmooth or damaged.
- Keep out of reach of children.



MADE IN CHINA