 


JYBIS

QUICK START GUIDE

SIZE

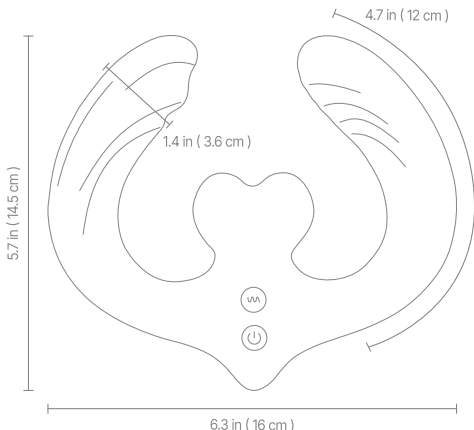 


SPECIFICATIONS

Material: Silicone+ABS
Power Source: USB charging
Functions: 7 Vibrating Modes

Charging Time: 120min
Using Time: 60min
Waterproof: IPX7

FUNCTION

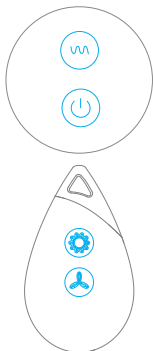

Product

 
- Long press "⏻" for 2s to power on/off.
- Short press "⏻" to change vibration modes of the two heads on the both sides.
- Short press "⚙️" to change vibration modes of the middle head.
- Long press "⏻" for 2s to pause the vibration modes of middle head.

Remote control

- Short press "⚙️" to change the vibration modes of middle head.
- Long press "⏻" for 2s to pause.
- Short press "⏻" to change the vibration modes of two heads on both sides.
- Long press "⏻" for 2s to pause.

USB CHARGING

*WARNING: Please DO NOT use adaptor with ">5V" output

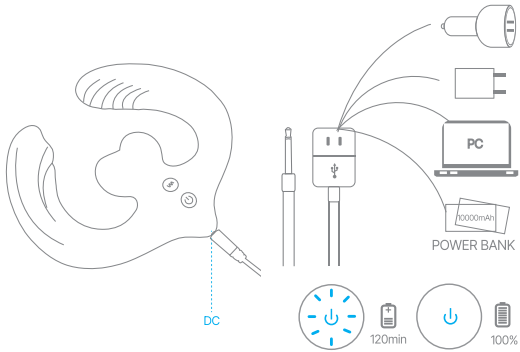

- Please make sure your toy is fully charged while the first time
- Connect the device to USB port to charge.
- Do not use the device while charging.
- Please connect with power adaptor below 5V.
- Do not submerge under water.
- If the product is not charging while plugged in, please wait 10 minutes and try again.

PRODUCT CLEANING

- Clean: Please clean product with warm water or antibacterial soap.
- Wipe: Dry the product with paper towels.
- Save: Keep the product in a cool, dry and clean place.
- Attention: Never clean this product with organic cleaner that contains alcohol, gasoline or acetone. Avoid direct sunshine.

SAFETY

- Do not use it at temperature over 167 °F/75 °C.
- Stop using it when any discomfort occurs.
- It is recommended to use it with water-based lubricant.
- Do not use it if you find the product unsmooth or damaged.
- Keep out of reach of children.



Certificates



MADE IN CHINA