 



QUICK START GUIDE

 
SIZE



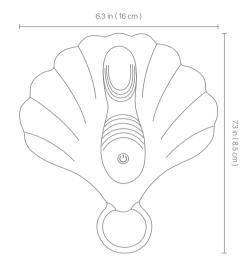

FUNCTION





Turn ON/OFF:

Press and hold " (*)" button for 1.5 seconds. Switch Vibration Settings: Quickly press " (*)" button to switch.

Remote Control Settings:

When the main unit enters the standby state press " ~" to start the vibration frequency cycle, press " ①" to pause the vibration.

HOW TO USE





For her


USB CHARGING

*WARNING: Please DO NOT use adaptor with ">5V" output



- Do not use the device while charging.
- Please connect with power adapter below 5V.
- Do not submerge under water.
- If the product is not charging while plugged in, please wait 10 minutes and try again.



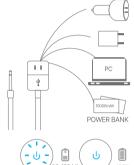





PRODUCT CLEANING

• Clean : Please wash product with toy cleaner or antibacterial soap and water.

Dry : Pat or wipe dry with clean cloth or towel.

: Keep toy in a cool, dry place. Store

• Attention: Never clean the toy with abrasive cleaners containing alcohol,

gasoline or acetone. Avoid direct sunlight.

SAFETY

- Do not use it at temperature over 167°F/75 °C
- Stop using the toy if any discomfort occurs
- Use with a water-pased lubricantDo not use if the product is damaged
- Keep out of reach of children.











